



**Kurz-Kasch, Inc.**


Electronics Division  
Box 1246  
1501 Webster Street  
Dayton, Ohio 45404  
Telephone (513) 223-8161

# Operating Instructions

**For Model** 256A, 185B, 222C

EXTRA INNINGS, DOUBLE PLAY

Midway

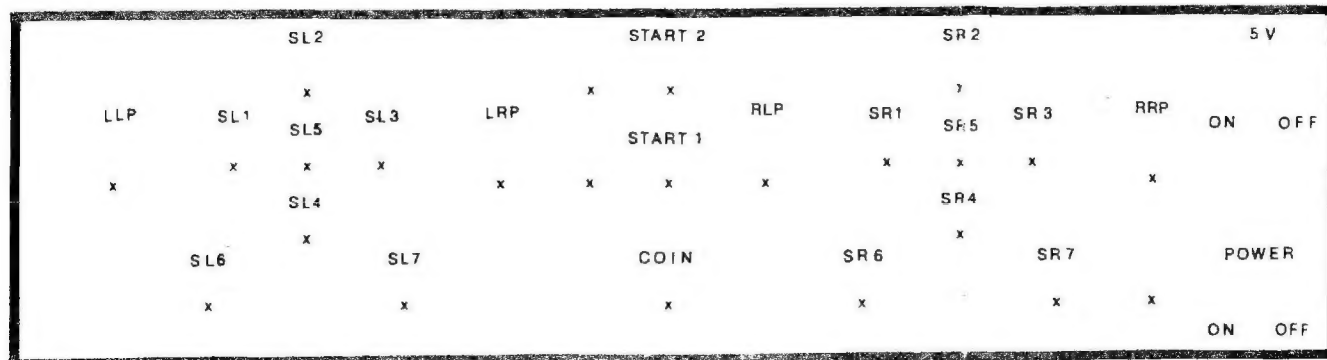

1. Insert 185B card into program "B" connector, number side up.
2. Insert 256A card into program "A" connector, number side up.
3. Insert 222C card into test fixture, number side up.
4. Insert Double Play game board into 222C connector.
5. Connect 22 pin and 11 pin Molex connector to game board.
6. Connect speaker to speaker leads.
7. Slide 5 VOLT switch to ON.
8. Slide POWER switch to ON.
9. Push Start 2 to Reset game.
10. Push COIN switch to coin game.
11. Use the momentary switch on the 256A card to select 1 Player or 2 Player.
- 12.

VISITORS

HOME

SL-6	Field Left	SR-6
SL-7	Field Right	SR-7
SL-1	Pitch Left	SR-1
SL-3	Pitch Right	SR-3
SL-4	Pitch Slow	SR-4
SL-2	Pitch Fast	SR-2
SL-5	Bat	SR-5